




THE ROGO LINE TURNABLE ASSEMBLY- AND OPERATING INSTRUCTIONS

LA PIATTAFORMA

ROGO LINE GIREVOLE

ISTRUZIONI PER IL MONTAGGIO E PER L'USO

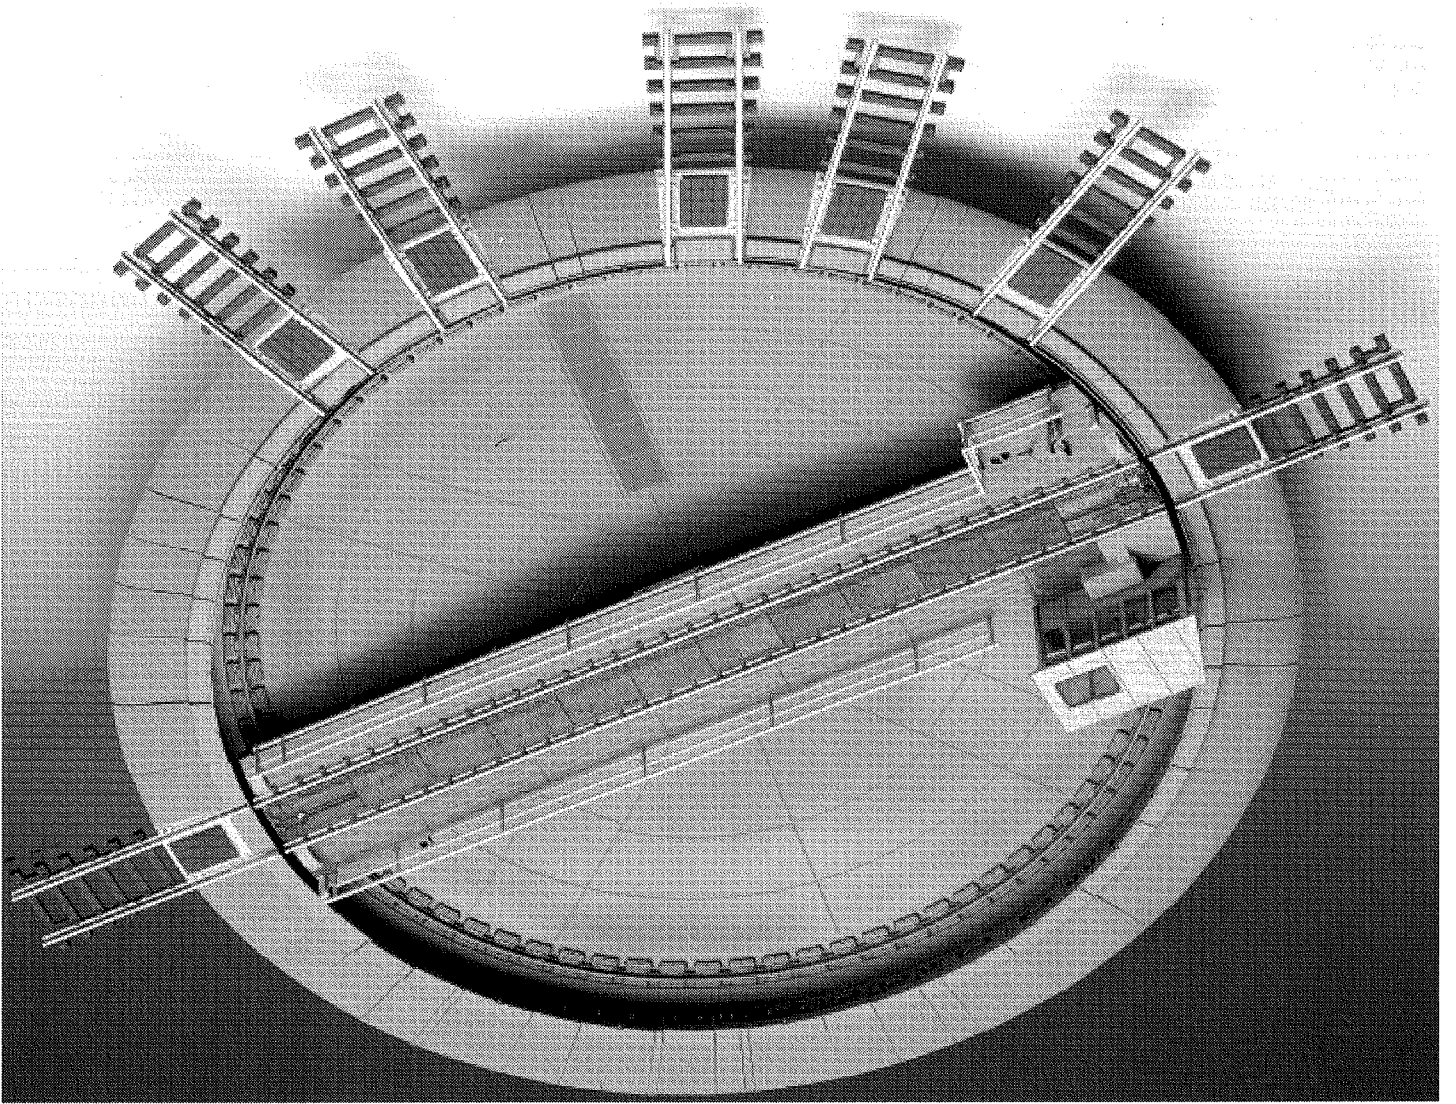

“Manual operation” of the turntable with control power switched on

can continue to turn automatically until it reaches the next following access track in the direction of rotation. Here it will stop. This operating possibility can be useful if the manual control unit has been placed at an appreciable distance away from the turntable.

The turntable is certainly the central object in every operations centre or train dispatch facility, as it is called in Austria. Therefore a great number of buildings and facilities which are essential for supply and maintenance of locomotives are located in its vicinity. Cologne, are shown.

plugs and the correct insertion of the drive shaft to the large worm gear). Then the protective cover is clipped back in the correct position. Please pay attention to the two operating mode switches so that they are placed into the openings of the cover rather than being pushed down. If everything has been properly assembled check the position of both operating mode switches and if necessary, correct to conform to the turntable operating mode applicable to your layout.

(b) Replacement of the motor brushes or of the drive motor:

To have access to the drive unit, consisting of motor, slip clutch and worm gear, proceed in the same manner as described above for lubrication.

● **Replacement of the drive unit:** Remove the slip clutch and motor worm gear located on the drive shaft together with the motor itself, after taking off the motor protective cover (unscrew two screws for this), carefully from the gear box, then lift the motor out of the contact springs at the commutator side of the motor.

Install new drive unit (replacement part no. 105284) in reverse order of disassembly, make sure that the

a) Lubrication of the drive unit: